



# Quick Start Guide

## 2.1 Channel Sound Bar with built-in subwoofer TB355

### 1. Specifications


#### Sound Bar

Power Requirements: AC 120V~ 60Hz  
 Power Consumption: 30 W  
 Output Power: 15W x 2  
 Audio Input Sensitivity: 500mV  
 Frequency Response: 40Hz - 20kHz  
 Speaker Impedance: 4Ω x 2 + 4Ω  
 Unit Dimension (W x H x D):  
 34.3 x 2.4 x 4.5 inch  
 872 x 60 x 113 mm

#### Remote Control

Distance/Angle: 19.7 feet (6m) / 30°  
 Battery Type: CR2025


### 2. Standard Accessories

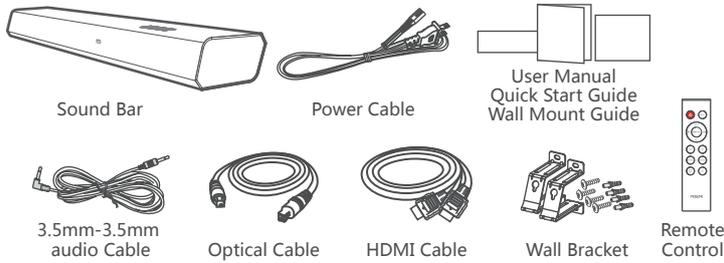


### 3. Preparations

The actual supply voltage is 120V~ 60Hz.


Before connecting the AC power cord, ensure you have completed all other connections.

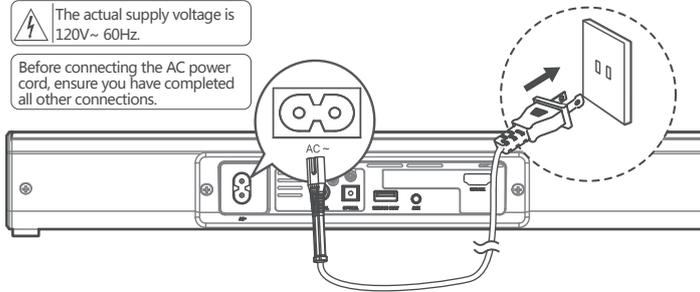

### 4. Product Description

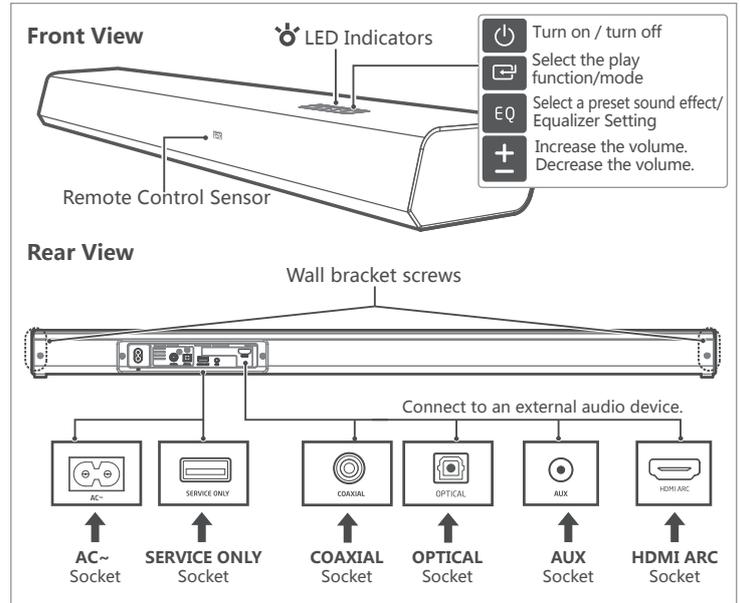


#### Remote Control

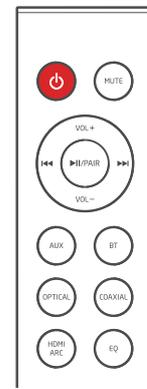

	Turn on / turn off
<b>MUTE</b>	Mute or resume the sound
<b>AUX BT</b> <b>OPTICAL</b> <b>COAXIAL</b> <b>HDMI ARC</b>	Select the play function/mode
<b>▶ II PAIR</b>	Start/pause play Activate Bluetooth pairing
<b>⏮</b> <b>⏭</b>	Previous track Next track
<b>VOL+</b> <b>VOL-</b>	Increase the volume. Decrease the volume.
<b>EQ</b>	Select a preset sound effect/ Equalizer Setting

#### First-time use :

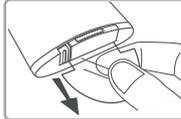

Remove the protective tab to activate the remote control battery.

#### Replacing the Remote Control Battery:



The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

### 5. General Operation


#### Standby/ON

- When you first connect the unit to the power outlet, the unit will be in STANDBY mode.
- Press the button on the remote control to switch the main unit ON or OFF.
- Disconnect the power Cord from the power outlet if you want to switch the unit off completely.
- If a TV or an external device is connected, the unit will switch on automatically when the TV or the external device is switched on.
- When the unit has no input signal for over 15 minutes, the unit will automatically switch to Standby mode.


#### Adjust the Volume

- Press the VOL+ / VOL- buttons to adjust the volume.
- If you wish to turn the sound off, press the MUTE button on the remote control. Press the MUTE button again or press the VOL+ / VOL- buttons on the unit or on the remote control to resume listening.
- While adjusting the volume, the status indicator flashes quickly.
- While the volume level reaches its maximum level, if you press the VOL+ button again, the status indicator flashes once. While the volume level reaches its minimum level, if you press the VOL- button again, the status indicator flashes once.


### 6. AUX Operation

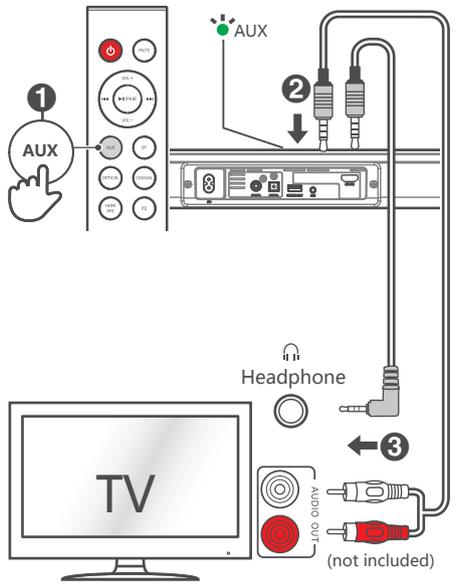


### 7. Bluetooth Operation

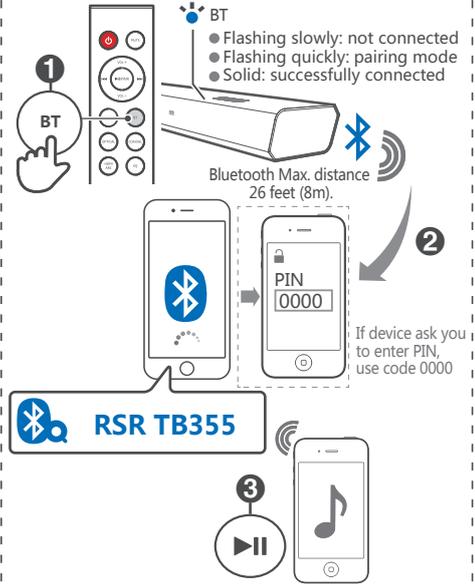


## 8. OPTICAL Operation

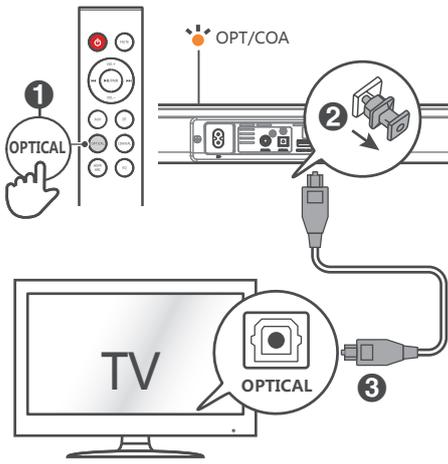

## 9. COAXIAL Operation


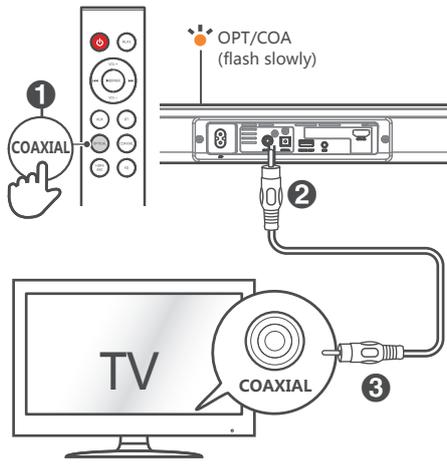


## 10. HDMI ARC Operation

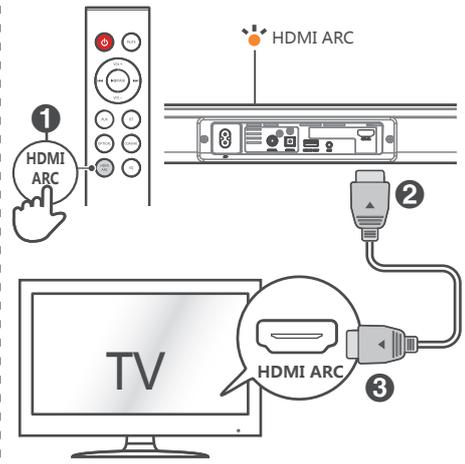

**! Tips** While in OPTICAL/COAXIAL/ HDMI ARC mode, if there's no sound output and the status indicator flashes quickly from the unit, you may need to activate PCM Signal output on your source device (eg. TV, DVD or Blu-ray player).

## 11. Wall Mounting

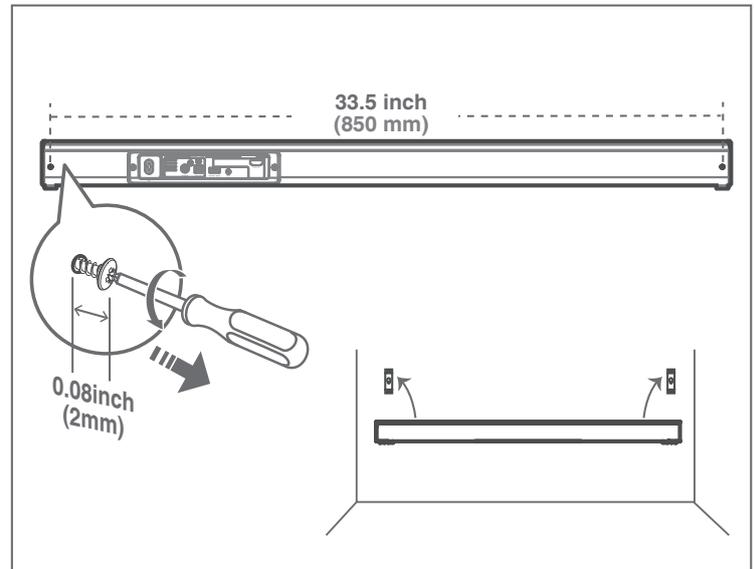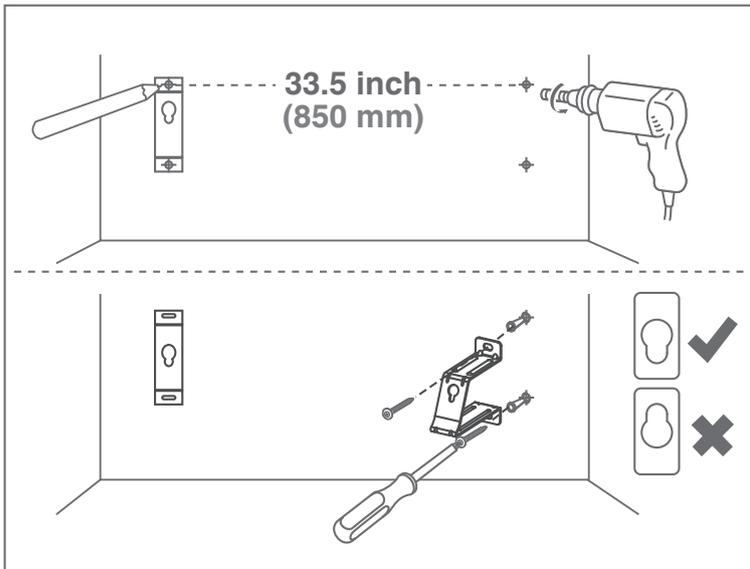

## Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, refer to the FAQ and check the following before requesting service.

### No power

- Ensure that the AC cord of the apparatus is properly connected .
- Ensure that there is power at the AC outlet.
- Press standby button to turn the unit on.

### Remote control does not work

- Before you press any playback control button, first select the correct source.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/-) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

### I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing

- Ensure the Bluetooth function is activated on your Bluetooth device.
- Ensure you have paired the unit with your Bluetooth device.

## 1 Year Warranty!

Thank you for being a customer!

RSR offers a 1 year product warranty from the date of your purchase. Please refer to the Warranty Statement for additional information.

After-sales service is available in the case that the product is faulty or if you are simply having trouble with the setup. Please contact us at:

[customerservice@richsoundus.com](mailto:customerservice@richsoundus.com)